

# GALANT

## WORKSHOP MANUAL

### FOREWORD

This Workshop Manual contains procedures for service mechanics, including removal, disassembly, inspection, adjustment, reassembly and installation. Use the following manuals in combination with this manual as required.

TECHNICAL INFORMATION MANUAL  
PYDE9604

WORKSHOP MANUAL  
ENGINE GROUP PWEE□□□□  
(Looseleaf edition)

ELECTRICAL WIRING PHDE9608

BODY REPAIR MANUAL PBDE9609

PARTS CATALOGUE

Sedan B608S107A□  
Wagon B608T507A□

All information, illustrations and product descriptions contained in this manual are current as at the time of publication. We, however, reserve the right to make changes at any time without prior notice or obligation.



General .....	<b>00</b>
Engine .....	<b>11</b>
Engine Lubrication .....	<b>12</b>
Fuel .....	<b>13</b>
Engine Cooling .....	<b>14</b>
Intake and Exhaust .....	<b>15</b>
Engine Electrical .....	<b>16</b>
Engine and Emission Control ....	<b>17</b>
Clutch .....	<b>21</b>
Manual Transmission .....	<b>22</b>
Automatic Transmission .....	<b>23</b>
Front Axle .....	<b>26</b>
Rear Axle .....	<b>27</b>
Wheel and Tyre .....	<b>31</b>
Power Plant Mount .....	<b>32</b>
Front Suspension .....	<b>33</b>
Rear Suspension .....	<b>34</b>
Service Brakes .....	<b>35</b>
Parking Brakes .....	<b>36</b>
Steering .....	<b>37</b>
Body .....	<b>42</b>
Exterior .....	<b>51</b>
Interior and Supplemental Restraint System (SRS) .....	<b>52</b>
Chassis Electrical .....	<b>54</b>
Heater, Air Conditioner and Ventilation .....	<b>55</b>

**WARNING!**

- (1) Improper service or maintenance of any component of the SRS and seat belt with pre-tensioner, or any SRS-related component, can lead to personal injury or death to service personnel (from inadvertent firing of the air bag and seat belt with pre-tensioner) or to the driver and passenger (from rendering the SRS inoperative).**
- (2) SRS components and seat belt with pre-tensioner should not be subjected to heat, so remove the SRS-ECU, air bag module (driver's side and front passenger's side), clock spring, side impact sensor, front seat assembly (side air bag module) and seat belt with pre-tensioner before drying or baking the vehicle after painting.  
SRS-ECU, air bag module, clock spring and side impact sensor: 93°C or more  
Seat belt with pre-tensioner: 90°C or more**
- (3) Service or maintenance of any SRS component and seat belt with pre-tensioner or SRS-related component must be performed only at an authorized MITSUBISHI dealer.**
- (4) MITSUBISHI dealer personnel must thoroughly review this manual, and especially its GROUP 52B - Supplemental Restraint System (SRS), before beginning any service or maintenance of any component of the SRS and seat belt with pre-tensioner or any SRS-related component.**

**NOTE**

Section titles with asterisks (\*) in the table of contents in each group indicate operations requiring warnings.